



Do-It-Yourself Measuring Guide

Taking the time to properly measure for your new window will help to ensure a proper fit and easy installation. To make this as easy as possible, below are step-by-step instructions for this Do-it-yourself project.

Tools needed. Screw Gun, Tape Measure, Putty Knife

Step 1. Remove the old window.

- Remove the screws around the perimeter of the window frame from inside the vehicle. There will be approximately 12-20+ screws depending on the size of the window. (See photo A)
- Once all screws are removed, the trim ring can be taken down and set to the side (See photo B). Then, from inside the vehicle firmly push the window out of its opening. It is recommended that a second person place a hand on the window from the outside of the RV to prevent the window from falling to the ground.
- If all screws have been removed and the window is still firmly held in place, slide a thin putty knife under the exterior window flange and work your way around the window until it can be removed. Be careful not to damage any paint or graphics that are on your vehicle. (See photo C)



Step 2. Measure the rough opening.

- Measure the rough opening in your sidewall, not the old window. Do not try to duplicate the old window dimensions. Atwood will make the appropriate accommodations to properly fit the new window to the rough opening dimensions.
- All measurements must be to the nearest 1/16 inch—Measure twice! Simple rectangles require only 2 measurements (See Illustration 1).
- Parallelogram/Trapezoid shaped windows require 6 measurements. Use masking tape on the sidewall to extend the measurement lines beyond the radius and to the intersection point. (See Illustration 2 and 2.1)



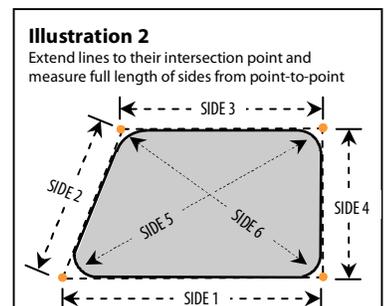


Illustration 2.1

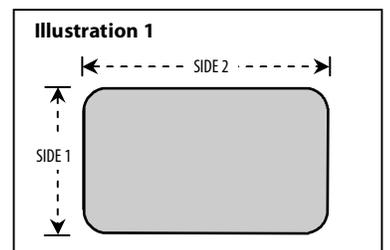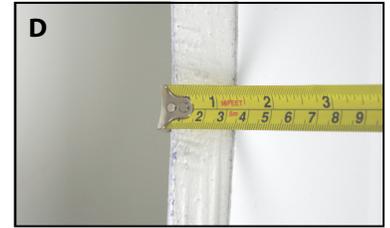

Step 3. Measure sidewall thickness.


- Measure sidewall thickness from the exterior wall surface to the interior wall surface. Do not include the window frame in this measurement. (See photo D)
- Wall thickness typically ranges from around 1-1/4" to 2-1/2".

**Step 4. Measure Corner Radius.**

Windows with radius (rounded) corners are very common, and most use a 2.5" or 3" radius but don't assume—measure! If you have a square or mitered corner you may skip this step.

The easiest way to determine corner radius is:

- Print out the radius template at full scale (See Illustration 4). The template can be downloaded from our website. At full scale the dashed line will have a radius of 2.5" (5" across), and the solid line will have a radius of 3" (6" across). This can also easily be done by using a compass to draw your own circles.
- Hold the radius template up to a corner in the rough opening for the window and determine which radius most closely matches. This is what radius your window should be. (See photo E)

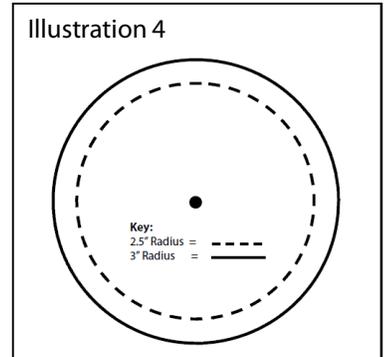**Step 5. Price and Order a Replacement RVWindow**

- Go to our website at easyRVwindows.com and select "Instant Pricing" link at the top of the page. You will get an instant price quote after you make a few feature selections and input your window measurements. Once you have received a price and are ready to order, our website will walk you through the ordering process.
- Or, feel free to contact us via phone or email. We will be happy to step you through the process and answer any questions you might have.

Phone: (800) 825-4328 / Email: windows@atwood.com

Disclaimer: It is the consumers responsibility to ensure the accuracy of the window measurements submitted for order. Atwood assumes no responsibility for any incorrect measurements or selection made by the consumer.